

CPS Programming password lock


Apart from the power on password, there is also a hidden programming password that will require a four character password to be entered in the CPS software before it will do any read or write operation. **The password must be four characters, no more or less**, and can be made up of any standard ASCII characters that can be typed on a keyboard. To do this, use Colin's AnyTone Options application (download link below) to enter a Program Password. To disable any program password that may be present, just use the backspace button to delete the password and leave this field blank; then write back to the radio.

Info Taken from -

(<https://hamradiosouthernrepeaters.co.uk/images/878Mods/878techmods.html#Password>)

Download AnyTone Options application

[AT_Options 8.zip](#)



The screenshot shows a software interface with several input fields. The 'Program Password' field is highlighted with a blue border and contains the text '1234'. Other fields include 'Radio Type', 'Band Setting Password', 'Frequency' (set to 'Band 0'), 'Serial Number', and 'Production Date'. An 'Exit' button is located on the right side of the interface.

Password will require four character only

Use the AnyTone Options software

Read Radio

Set Password (**four characters**)

Write back to radio

<http://tiny.cc/AnytoneDMR>