

CPS Programming password lock

Apart from the power on password, there is also a hidden programming password that will require a four character password to be entered in the CPS software before it will do any read or write operation. **The password must be four characters, no more or less**, and can be made up of any standard ASCII characters that can be typed on a keyboard. To do this, use Colin's AnyTone Options application (download link below) to enter a Program Password. To disable any program password that may be present, just use the backspace button to delete the password and leave this field blank; then write back to the radio.

Info Taken from -

(<http://members.optuszoo.com.au/jason.reilly1/868mods.htm#Password>)

Download AnyTone Options application

http://members.optuszoo.com.au/jason.reilly1/AT_Options.zip



The screenshot shows a software interface with several input fields and a button. The fields are labeled as follows:

- Radio Type:
- Band Setting Password:
- Frequency:
- Program Password:
- Serial Number:
- Production Date:

An "Exit" button is located on the right side of the interface.

Password will require four character only

Use the AnyTone Options software

Read Radio

Set Password (**four characters**)

Write back to radio

<http://tiny.cc/AnytoneDMR>