

 
Digi Moni is missing in radio

Open the CPS and go to – Optional Settings – Other or Work Mode

Change to Amateur Mode



or



<http://tiny.cc/AnytoneDMR>