## How to scan between two sets of frequencies.

## In the CPS – Optional Settings – VFO Scan

Set your start and end Frequencies

Work Mode	Vox	STE	FM	Power Save	Key Function	Other	Digital Fu
ower-on	Alert Tone	Display	GPS/Ranging	VFO Scan	Auto repeater	Record	Volume/Aud
FO Scan							
	VFO Scan Type	со	-				
VFO Scan	Start Freq(UHF)	453.	00000				
VFO Scan	End Freq(UHF)	459.	00000				
VFO Scan	Start Freq(VHF)	136.	00000				
VFO Scan	End Freq(VHF)	174.	00000				

#### Go to VFO Mode on the radio.

#### Push Programming Scan Key to start scan.

(You will need to set a Function Key for VFO Scan)

D2 Ohard Karr	NEO O	
P2 Short Key	VFO Scan	

#### Scan Type: Select

TO - 5 sec stop CO - 2 sec stop SE - stops scan

You might want to read "Scanning DMR VFO Frequencies"

# To Scan Frequencies outside this range.

## Enter a Frequency via the Key Pad

## Push Scan Key to start scan.

(You will need to set a Function Key for Scan)



### TIPS

Turning the Channel knob **left** will make the scan go **down** the Frequencies Turning the Channel knob **right** will make the scan go **up** the Frequencies

http://tiny.cc/AnytoneDMR