

# How to use GB7BC

DMR is on the [FreeDMR Network](#). Repeaters [Dashboard](#).

## Slot 2

Static - TG 2350

TG9 - [Dial-a-TG](#) is on if anyone wants to use.

All [Worldwide TGs](#) live via user activated.

UK [TGs along with DVSPH and SWC](#), via user activated.

## Slot 1

TG9 Local

Static - TG 23510

*No other TG will work on slot 1. (Use Slot 2)*

**APRS** - <https://www.freedmr.uk/index.php/d-aprs/>

The default SSID is -7.

---

## Fusion - YSF, FCS

No reflector set as Default.

Call the YSF reflector you wish to use. [https://www.pistar.uk/ysf\\_reflectors.php](https://www.pistar.uk/ysf_reflectors.php)

Call the FCS reflector you wish to use. [https://www.pistar.uk/fcs\\_reflectors.php](https://www.pistar.uk/fcs_reflectors.php)

---

## D-Star - DCS, XLX, REF

[XLX005 S](#) reflector set as Default.

Call the reflector you wish to use.

DCS reflectors <http://www.xreflector.net/>

REF reflectors <http://www.dstarinfo.com/reflectors.aspx>

XLX reflectors <http://xlx005.freedmr.uk/index.php?show=reflectors>

---

No other Digital mode is turned on at this time.

If you call a Talk Group/Reflector, and it is not used for 15 min, it will disconnect and go back to its Static or Default.

Keep in mind, only one digital mode can be live at any time.